

FOOD SAFETY is our Passion.
Making it **SIMPLE** is our Mission.®



Made for supermarkets, large venues, fitness centers and more!



ACCESSORY

FlexFit Floorstand

FlexFit Floorstand is a versatile solution designed to fit all Sani Professional® canister and bulk bagged products. Its flexible design supports a wide range of Sani Professional® SKUs, making it easy to adapt across multiple environments. With a replaceable front graphic for customer branding, it is ideal for front-of-house, customer-facing operations needing hand, sanitizing, and disinfecting wipe dispensing.

Wipe dispensing lid
with safety cover

Top bin holding product
to dispense through lid

Wheels for easy
maneuver around
facility

NEW!

Replaceable
signage for
custom displays

Trash compartment
with removeable bin

Storage compartment
for extra product

P079900

DIMENSIONS:
43.875" tall x 13.8" deep x 12" wide


Item #	Product Description	Outer Case Dimensions	Case Weight	Case Cube	Pallet (TI/HI)*	GTIN #
P079900	FlexFit Floorstand - 1 ct.	47.50 x 19.88 x 15.50 in (120.65 x 50.50 x 39.37 cm)	47.34 lbs (21.47 kg)	8.47 cu ft (0.240 cu m)	2/6	(01)00310819009348

Sign holders for retrofitting existing floorstands - P106HC/P165HC

*TI/HI = Cases per layer/Number of layers.

Sani Professional® FlexFit Floorstand Usage Instructions


1. PREPARE PRODUCT

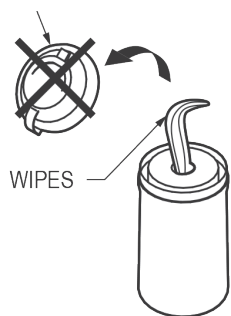

CANISTER PREPARATION:

Prepare product by first removing and discarding both canister lid and inner seal. Pull a wipe from center of the roll.


– OR –

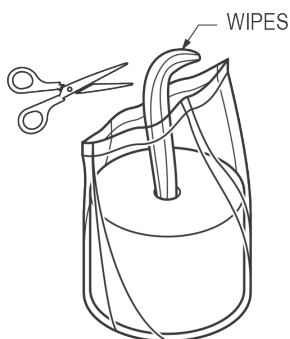

BAGGED PRODUCT PREPARATION:


Prepare product by cutting open top of bag. Pull a wipe from the center of the roll.

2. THREAD THE WIPE THROUGH THE LID

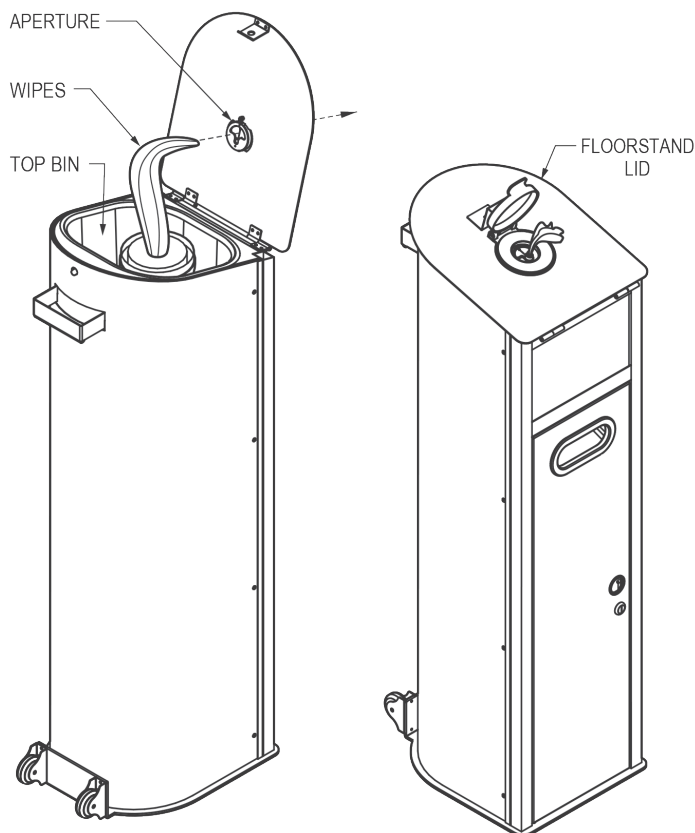

Open the floorstand lid and place the product in the top bin. Pull a wipe from center of the roll and twist the top of the wipe into a point. Feed the point through the slit in aperture by 1", then close the floorstand lid.


3. FINISH INSTALLATION

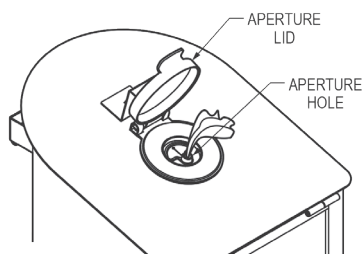

OPEN THE APERTURE LID and pull the wipe forward into the aperture hole.

TO REPLACE THE GRAPHIC:

Open the floorstand lid and remove the existing graphic and clear acrylic from the front channel underneath the lid hinges. Replace the graphic and insert behind the clear acrylic panel. Place both back into the sign channel.

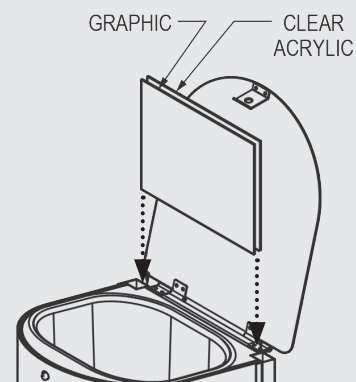

Sanitize Confidently®

For more information or to order any of these products, contact Sani Professional®
Customer Care at: ☎ 866.673.4376 | ✉ info@saniprofessional.com

© 2026 Professional Disposables International, Inc. All rights reserved. Sani Professional®, Food Safety is our Passion. Making it Simple is our Mission®, and Sanitize Confidently® and all associated logos and product images are registered trademarks or properties of PDI, Inc.
70914v9



FOOD SAFETY is our Passion.
Making it **SIMPLE** is our Mission.®